


Phantom Installation Instructions

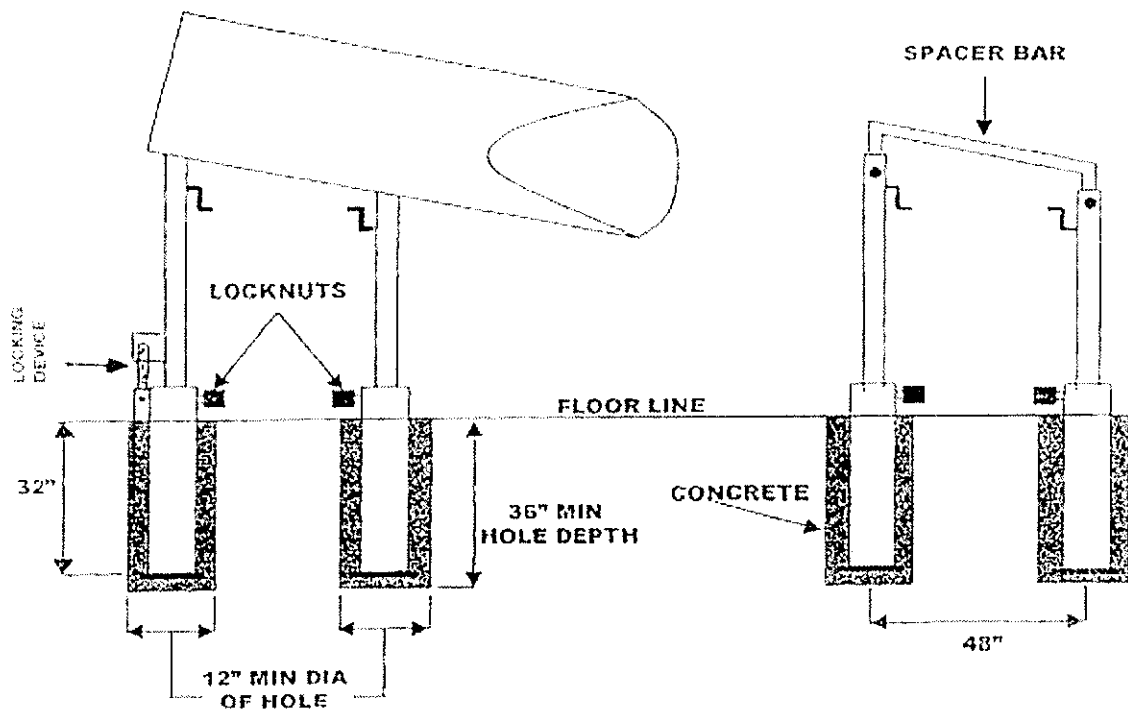

Concrete in the two sleeves with the locknuts above the floor line. Use the spacer bar to hold the legs at the proper distance apart when concrete is poured around the sleeves. Distance center to center of the sleeves is 48 inches. Use the longer leg in front. Make sure legs and sleeves are plumb vertical and legs are adjusted to the lowest position.

After the concrete is cured, discard the spacer bar and attach the body to the legs using (2) 1/2" x 6" bolts. It may be necessary to loosen the bottom lacing to access the bolts.


When the sleeves are installed, the locknuts should be in line with the body. This will eliminate the fore and aft movement of the body when the locknuts are tightened.

To adjust the height:

1. Loosen locknuts
2. Turn handle in the desired direction.
3. Tighten locknuts.

There is 15 inches of adjustment in each leg.

TOP VIEW

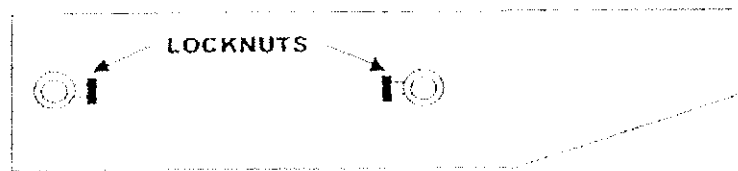

LEG TO BODY ATTACHMENT

